 


## Multifunctional Radio Flashlight

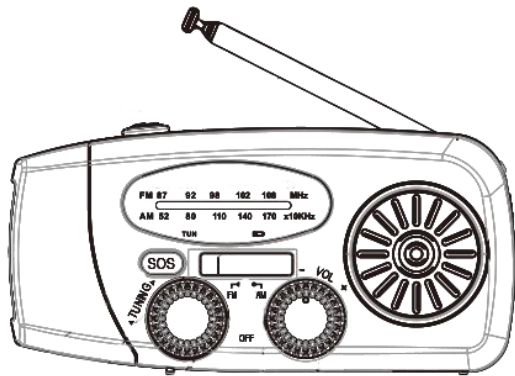 


### Function:

- LED flashlight
- FM/AM
- SOS emergency signal button
- Emergency mobile phone charging
- Charge/discharge protection
- Multi-functional charging methods
  - Hand crank charging
  - Solar charging
  - USB charging
- IPX3 waterproof

### Manual:

- Turn the power button clockwise and adjust the volume.
- Choose AM, FM station and pull the radio's antenna up to receive a better signal.
- Turn the tuning knob to select a better channel. The signal indicator will turn green when the radio receives a signal.

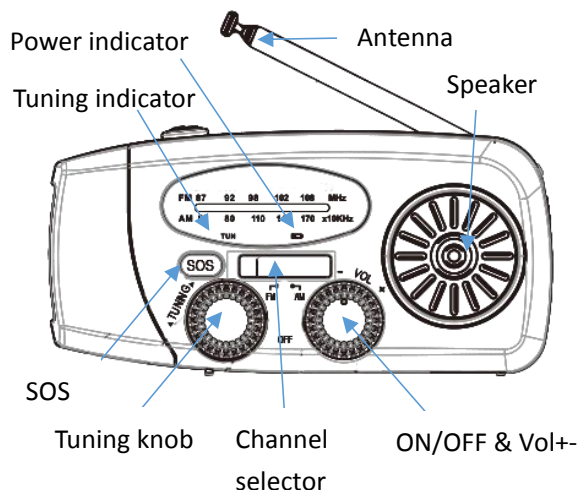


### Flashlight use:


- Press the flashlight switch to turn on the flashlight.
- Press the switch again to turn off the flashlight.

### Solar power/Hand crank/USB charging
 
#### A Solar charging

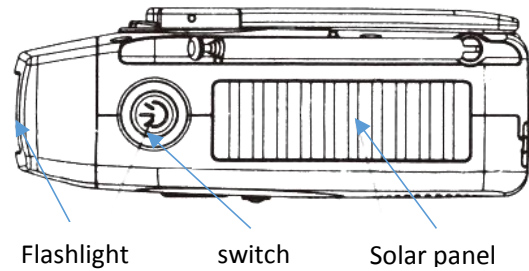


 - The radio can be fully charged after 66 hours by placing it in the direct sunlight. When the red indicator light is on, it proves that the radio is charging.

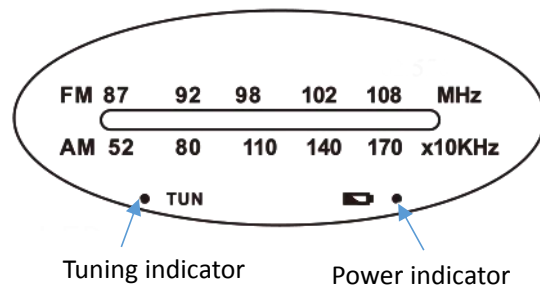

#### B Hand crank charging

 - Pick up the crank.
- When using the radio for the first time, or if the radio has not been used for more than 60 days, hand crank clockwise or counterclockwise for 3 to 5 minutes continuously to activate the built-in battery. The red indicator will light up when the radio is charging.
- If charging the radio by hand continuously, shake the hand joystick continuously for 1 minute (hand crank frequency  $\geq 130$  times), you can use the flashlight for 15~20 minutes; radio playback (at medium volume) for 15~20 minutes; phone charging calls for 3~5 minutes time.

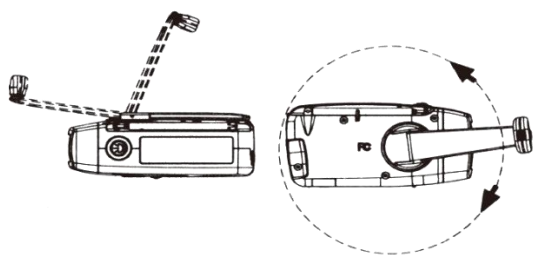


### Specification:

- Dimension: 128 x 60 x 45 (mm)
- Weight: approx 300g
- Maximum power: 1.5W
- Frequency:
  - AM: 520~1710 KHz
  - FM: 87~108 MHz
- Working voltage: 2.7~4.2V
- Battery: 3.7/2000mAh Li-ion

### C USB charging

 - Use the Type-C interface to connect to the radio and then the other end of the USB interface to connect to a computer. The red light is on when the radio is charging.

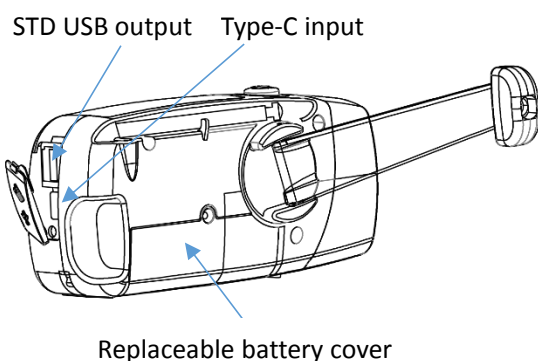


### Maintenance:

- Wipe the casing of the radio with a soft cloth.
- Use qualified products to clean the flashlight lens.
- Do not use any rough tools or solvents to clean the radio.
- The radio is not completely waterproof, just IPX3 level. Therefore, it is forbidden to place it in water for a long time.
- When the radio has been idle for more than 60 days, or when it is used for the first time. Please use hand-crank charging or solar charging for 3~5 minutes to activate the built-in battery.

### Phone charging

 - Open the rubber cover.
- Use a USB cable to connect the phone, the phone will automatically charge. No need to crank the radio.

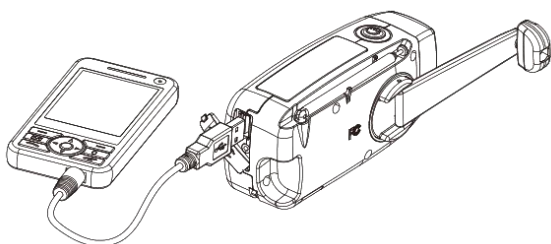

### Charging protection

- When the red charging indicator light flashes, it means the radio is charging. After fully charged, the red indicator light is always on.

### Discharge protection

- When the battery is overloaded or short-circuited, the output will stop automatically.
- When the voltage is lower than 2.5V, the power supply will cut off automatically.